



® 4242 Baldwin Boulevard
 Corpus Christi, Texas
 USA 78405-3399
 Tel: 800-531-3111, 361-888-5591
 Fax: 800-531-3108, 361-888-6510
 www.hortondoors.com
 The Automatic Choice

ARCHITECTURAL DETAILS

AUTOMATIC FOLDING DOORS

FoldingAccess® Series 4-4200

Type: Fold-out LHR-RHR Pair with Magnetic Lock

B14.5

Nov 16

Standard Packages

Unit Width	Fold Opening	Breakout Opening	Fold Reach	Breakout Reach	Rough Opening Width
7'-0" (2134)	5'- 4" (1648)	5'-11" (1810)	1'-3" (381)	2'-10 1/2" (876)	7'-0 1/2" (2146)
8'-0" (2428)	6'- 4" (1953)	6'-11" (1810)	1'-6" (381)	3'-4 1/2" (876)	8'-0 1/2" (2146)

Consult factory for Unit Widths less than 7'.
Max. Unit Height: 8'- 0" (2438). **Rough Opening Height:** 7'- 6 1/4" (2292)
Glazing: Standard unit prep'd to receive 1/4" (6) glass (by others).

Options

- Custom unit widths between 7'-0" & 8'-0".
- Transom & sidelites.
- 1/2" tall threshold.
- Custom bottom rails up to 10" tall.
- Custom jambs: 1 3/4" x 4 1/2" or 1 3/4" x 6".
- Custom anodized or paint finish.

See Arch. Specs starting on p. B16.0 and Specification Details starting on p. B15.0.
 Consult factory for optional glazing prep. (65 lbs. max. per panel).

Installation and Operation

- Door is perimeter mounted within curtainwall or rough opening with 1/4" min. shim space at header & jambs. Finish floor not to exceed 1/4" out of level. (see p. B13.1)
- Electrical: Provide 120 VAC, 60 cycle, single phase, 15 amp service (in conduit) to each folding door unit on a dedicated 20 amp circuit breaker routed into header. Maximum current draw is 3.15 amps.
- Vista™ Sensor Sytem for folding doors (for 2-way traffic) includes header mounted motion sensors & swing-side safety sensor (see p. B13.2). After time-delay, door closes using spring force of less than 15 lbs.
- Emergency Egress / Panic Bar: Electromagnets hold panels in locked positions under normal conditions with 1000 lbs. min. force. Depressed panic bar releases magnetic lock and allows panel to breakout 90° from any position of travel. Power shuts off in break-out mode.
- Manual Lock: Exterior keylock and interior thumbturn located at right-hand vertical strike rail (see p. B15.3).

