



® 4242 Baldwin Boulevard
 Corpus Christi, Texas
 USA 78405-3399
 Tel: 800-531-3111, 361-888-5591
 Fax: 800-531-3108, 361-888-6510
 www.hortondoors.com
 The Automatic Choice

SELECTION GUIDE

AUTOMATIC SWING DOORS & OPERATORS - HEAVY DUTY

General Information - Operator Types and Configurations Surface Applied Operators


B1.0

Aug 18


Standard Hand Configurations

(Viewed from side opposite operator)



Pairs

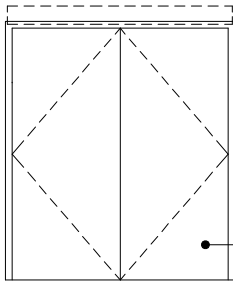


Double Egress

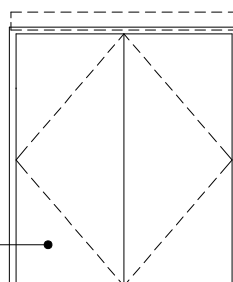

Singles

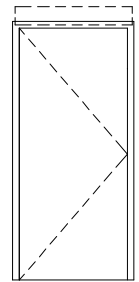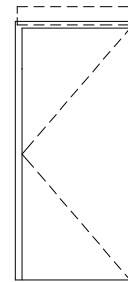


Swing door panels by others

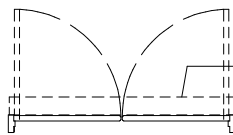

Operator Header


LH-RH

Left Hand - Right Hand
(Swing In)

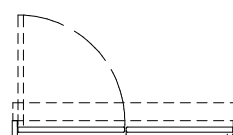


LH-RHR

Left Hand - Right Hand Reverse
(Swing In - Swing Out)

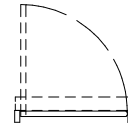


LH

Left Hand
(Swing In)

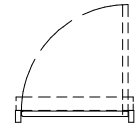


RH

Right Hand
(Swing In)

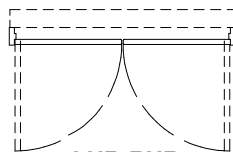


LHR-RHR

Left Hand Reverse - Right Hand Reverse
(Swing Out)

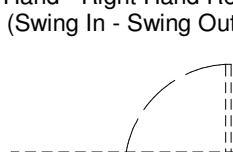


LHR-RH

Left Hand Reverse - Right Hand
(Swing In - Swing Out)

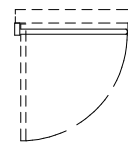

LHR


Left Hand Reverse
(Swing Out)

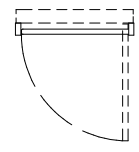


RHR

Right Hand Reverse
(Swing Out)


HD-Swing® Operator Types with Standard Arm Configurations

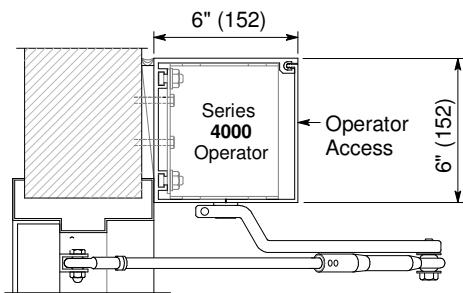



Series 4100 Side Access
 with Outswing Arm Assembly

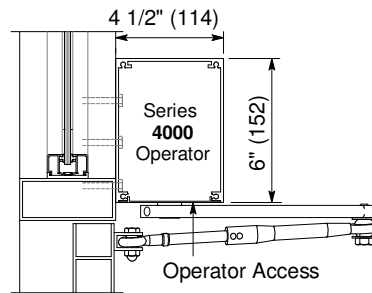


Series 4100 Bottom Access
 with Standard Inswing Arm Assembly

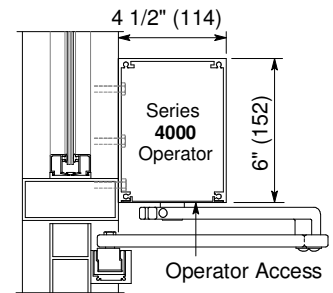

Series 4100 Bottom Access
 with Parallel Inswing Arm Assembly

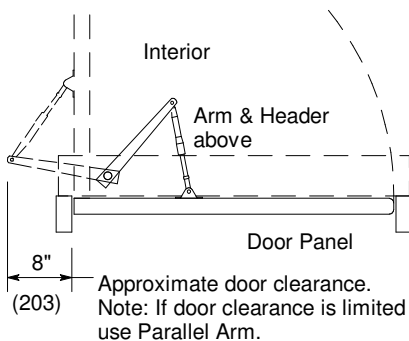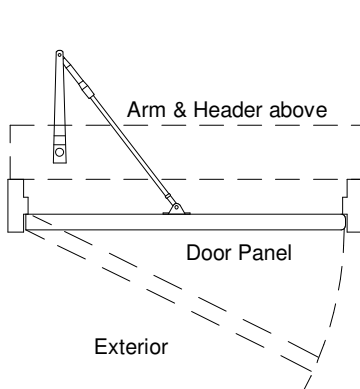

Approximate door clearance.
 Note: If door clearance is limited
 use Parallel Arm.

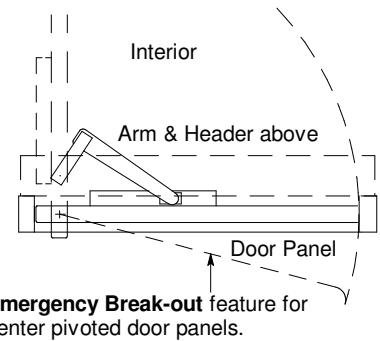

Emergency Break-out feature for
 center pivoted door panels.