



® 4242 Baldwin Boulevard  
 Corpus Christi, Texas  
 USA 78405-3399  
 Tel: 800-531-3111, 361-888-5591  
 Fax: 800-531-3108, 361-888-6510  
 www.hortondoors.com  
 The Automatic Choice

# SPECIFICATION DETAILS

## AUTOMATIC SWING DOORS

Optional Full Access Header for Series 4100 HD-Swing®  
 Surface Applied, Single & Pair, Parallel Inswing Arm

B3.1  
 July 10


### Standard Packages

Single Units Types: LH, RH		Pair Units Types: LH-RH	
Door Width	Header Width	Door Pair Width	Header Width
3'-0" (914)	3'-3" (991)	5'-0" (1524)	5'-3" (1600)
3'-6" (1067)	3'-9" (1143)	6'-0" (1829)	6'-3" (1905)
		7'-0" (2133)	7'-3" (2210)


**Anodized Finish:** Clear or Dark Bronze

### Installation and Operation


- Swing door header is surface mounted onto frame and connecting arm assembly is mounted to face of door panel. Frame and door panel to be provided by others.
- Electrical: Provide 120 VAC , 60 cycle, single phase, 15 amp service (in conduit) to each swing door unit on a dedicated 20 amp circuit breaker routed into header. Maximum current draw is 3.15 amps (see page B1.4).
- Unit to be actuated by Vista™ Sensor System (for 1-way traffic). System includes motion sensor, swing-side safety sensor and photo beam mounted beyond the swing of the door (see page B1.5)

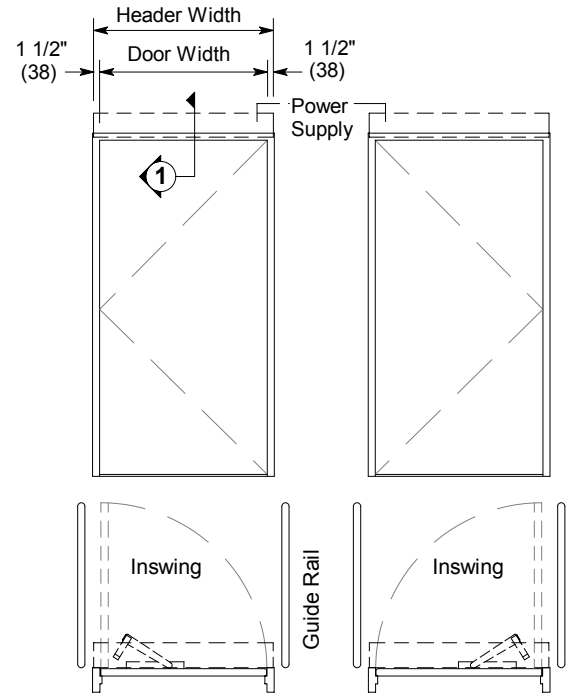


**Single Units  
 Floor Plans with Elevations**  
 LH & RH

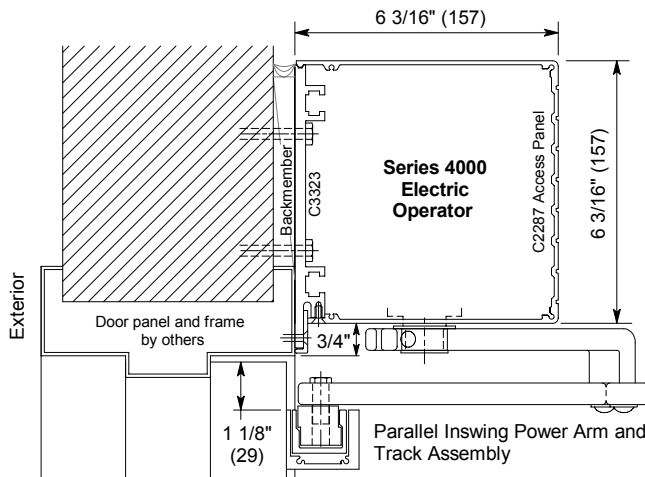

**Vertical Section '1'**

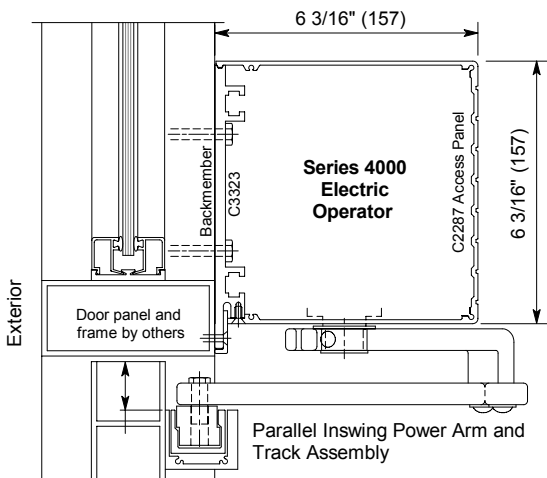

**Vertical Section '2'**

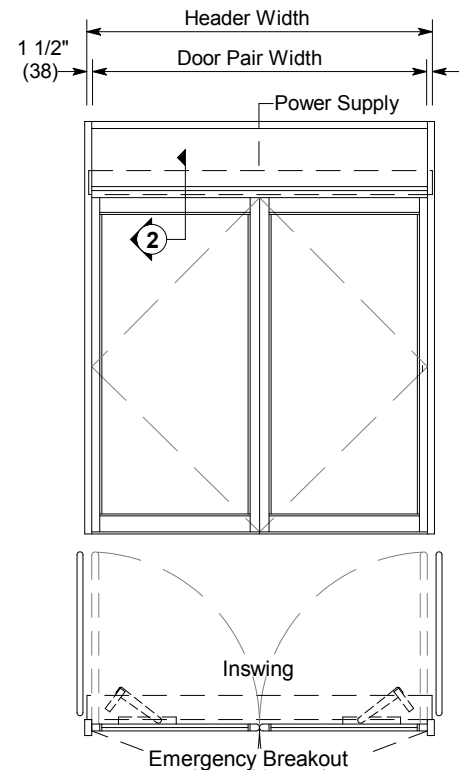

**Pair Unit  
 Floor Plan with Elevation**  
 LH-HR